

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

826.350


passend für / suitable for
adaptable à / adaptable a

Hyundai / Kia




Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

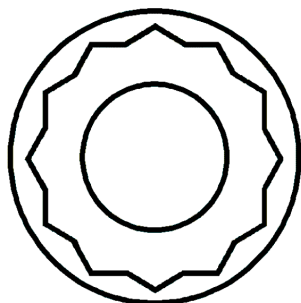

827.380
M 14x1,5x172

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

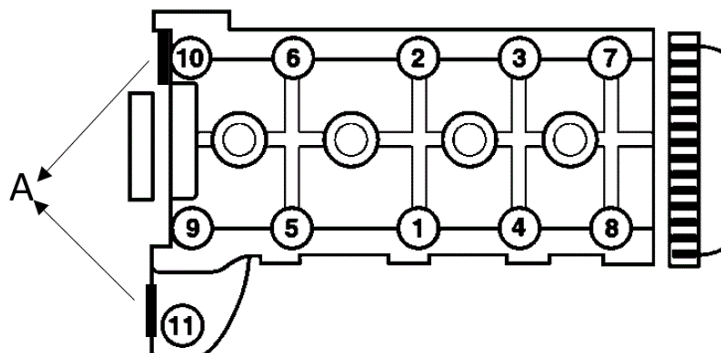

Anziehen/
Tightening/
Serrage/
Apriete

- ⊗ A: Dirko Sealing compound
- 1-10: 79±1 Nm
- 1-10: 120°
- 1-10: 120°
- 11: 32±2 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Hyundai / Kia

÷:1,20 mm / Ø: 86,2 mm

2.2L CRDI

Mot. D4HB

Sorento

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

826.350