

Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****B14.310**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

464.390

M 11x1,5x132/M

14x1,5x191

Anziehen/
Tightening/
Serrage/
Apriete

Pos. 1-10

Pos. 1-6

➤ Pos. 1-6

➤ Pos. 7-10

➤ Pos. 1-6

➤ Pos. 7-10

⑧

④

①

⑤

⑨

⑦

③

②

⑥

⑩

50 Nm

100 Nm

90°

60°

90°

60°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,3 mm, Ø 88,5 mm

2.3 Turbo Diesel Fiat/Iveco

Fiat Ducato

Iveco Daily

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

B14.310