

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas


144.150

passend für / suitable for
adaptable à / adaptable a


Fiat



Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

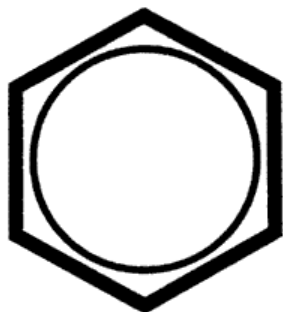

760.870
M 10x1,25x84/99

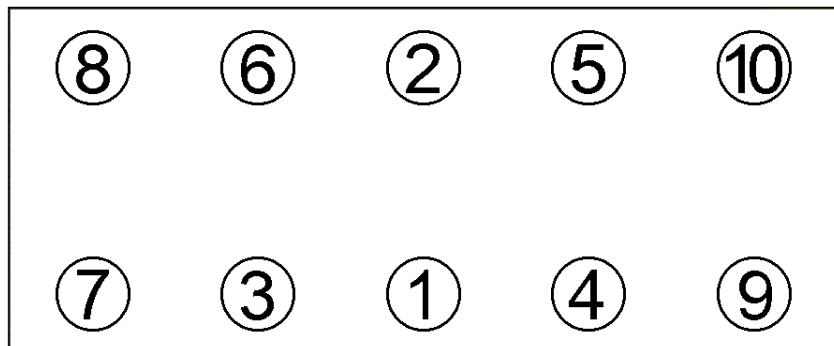

Anziehen/
Tightening/
Serrage/
Apriete

20 Nm
 40 Nm
 90°
 90°

M 8: 30 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,74/1,65 mm, Ø 87 mm

Mot.: 159 A3.000, 160 E1.011, 220 A2.000
1,6 Ltr.

Palio, Punto, Scudo, Tempra, Tipo, Uno
Lancia Dedra, Delta
Peugeot Expert, Citroën Jumpy

Elring-Serviceteam
Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/11/12

144.150