

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

894.054

passend für / suitable for
adaptable à / adaptable a

Saab




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



221.280
M 12x1,75x99

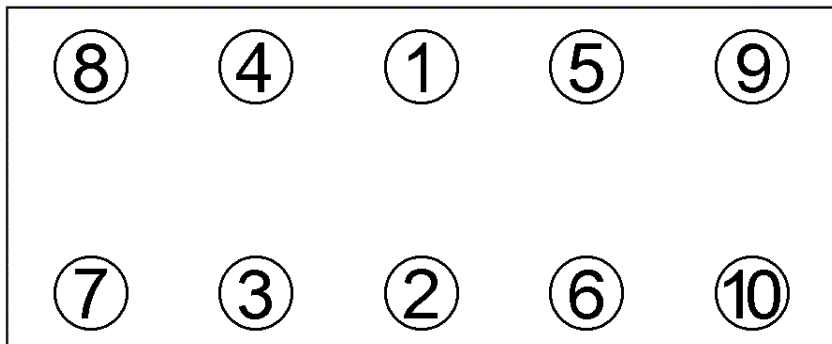

Anziehen/
Tightening/
Serrage/
Apriete

60 Nm
80 Nm
90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 91 mm

Mot: B204E/I/L/R/S, B206I,
B234E/I/L/R
2,0 ltr-2,3 ltr

900 II, 9000, 9-3, 9-5

Elring-Serviceteam

Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/11/12

894.054