 
 


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****058.740**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

A**B****8****6****2****4****10****9****3****1****5****7**Anziehen/
Tightening/
Serrage/
Apriete**A**Accord CE,CD ->1998
Shuttle RA1 ->1998

39 Nm

69 Nm

98 Nm

B

Accord CG 1998->



29 Nm

➤ 90°

➤ 90°

➤ 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 0,76 mm, Ø 86 mm

Mot.: F20B2/3/5/7, F22B1/2/3/4/5/6/8/9, F22Z2/6
2,0 ltr.-2,2 ltr., 100-110 kW (136-150 PS)Accord, Civic, Odyssey, Prelude, Shuttle
Acura CL**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

058.740