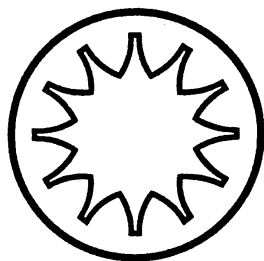
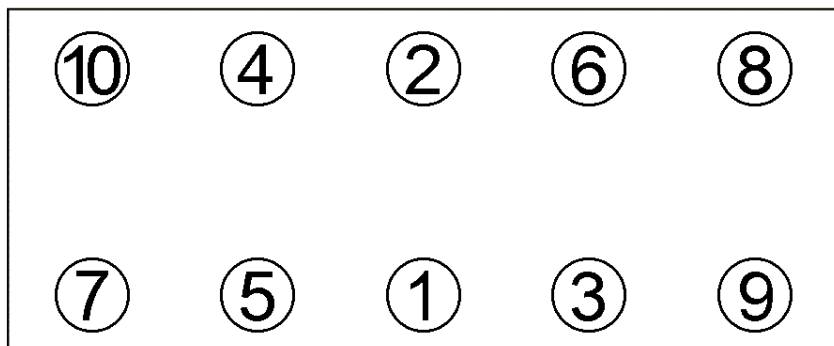


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****285.040**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo819.824
M 12x1,75x115Anziehen/
Tightening/
Serrage/
Apriete

- ⊙ 40 Nm
- 60 Nm
- 90°
- 90°
- * 80°C
- 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

78,5 mm Ø, 1,69/1,60 mm ÷

1,6 Ltr. Diesel, Mot.CR, JK 40 kW (54 PS)

Audi 80 D, 08/1982>07/1989

Audi 4000 (USA)

Audi 90 D, 04/1987>07/1989

1,6 Ltr. Diesel, Mot.CR ab Mot.176 339>, JK

Golf, ab Chassis 17 B 550 001>

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

285.040