

How to refill oil into compressors



1 Loosen drain screw for oil carefully.



2 Turn out drain screw completely.



3 Remove drain screw.



4 Exhaust compressor completely, turn clutch therefore.



5 Let the oil flow into a measuring jug to state quantity.



6 Adjust oil quantity according to manufacturer's advise.



7 Screw in again drain screw with seal.



8 Tighten drain screw again.



9 Turn clutch 5 times manually to dispose the oil all-over.