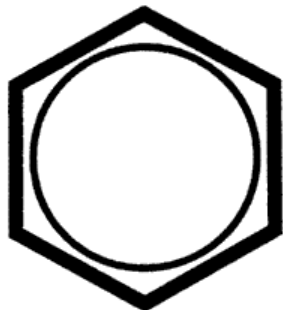
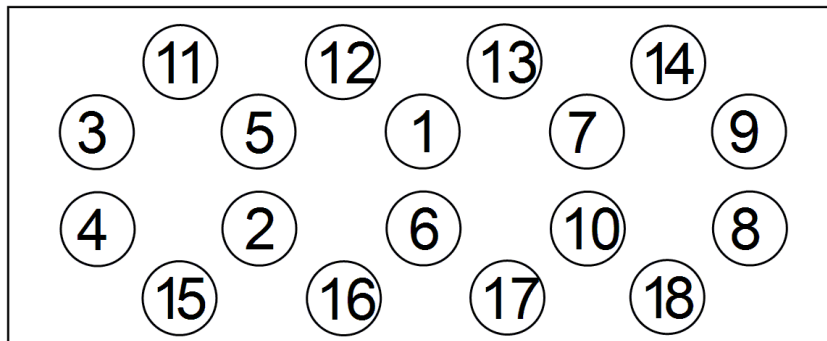


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****690.426**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

057.590

M 12x1,75x120

Anziehen/
Tightening/
Serrage/
Apriete

- 1-18:
30 Nm
- 1-10:
➤ 75°
- 11-18:
➤ 50°
- 1-18:
➤ 75°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,52 mm Ø 98,5 2 Löcher/holes

2,5 CRD / 2,8 CRD 88-120 KW (120-177PS) 16V

Mot. ENR, EDK, R2516, R2816

Chrysler Voyager III, Voyager IV
Jeep Cherokee (KJ), Wrangler
Dodge Nitro

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

690.426