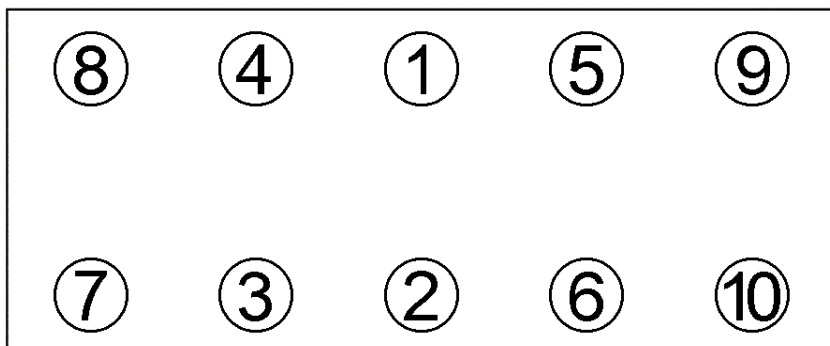


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****147.041**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo758.260
M 12x1,5x150Anziehen/
Tightening/
Serrage/
Apriete 20 Nm
60 Nm
➤ 90°
➤ 90°**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,72 mm, Ø 86 mm

Mot.: XUD11ATE/BTE, P8A, P8C, PHZ, PJZ
2,1 Ltr. Turbodiesel 12V; 80 kW (110 PS)Evasion, Xantia, XM, 406, 605, 806
Fiat Ulysse, Lancia Zeta**Elring-Serviceteam**Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/11/12

147.041