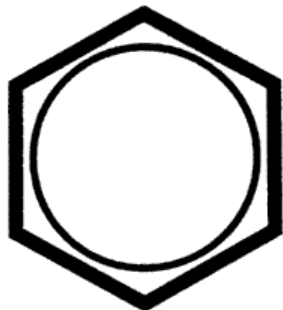
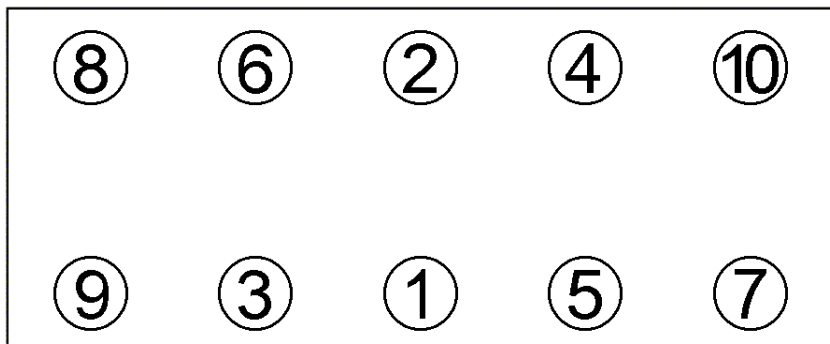


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****580.075**passend für / suitable for  
adaptable à / adaptable a**Ford****Das Original**Schraubenkopf / Head shape  
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

802.940  
7/16 - 135Anziehen/  
Tightening/  
Serrage/  
Apriete 20 - 30 Nm  
76 - 92 Nm  
 2 min  
 > 90°

## Zeichenerklärung / Explanations / Explication / Explicacion

|  |                                                |                                 |                                   |                                          |
|--|------------------------------------------------|---------------------------------|-----------------------------------|------------------------------------------|
|  | neue Zylinderkopf-<br>schrauben verwenden      | use new cylinder head<br>bolts  | utiliser des vis neuves           | emplar tornillos nuevos                  |
|  | Warmlauf (80°C)                                | warm up time (80°C)             | chauffage (80°C)                  | calentamiento (80°C)                     |
|  | Schrauben einzeln lösen<br>und wieder anziehen | loosen and tighten each<br>bolt | deserrer et serrer<br>vis par vis | aflojar y apretar<br>tornillo a tornillo |
|  | Setzzeit                                       | relaxation time                 | durée de tassement                | tiempo de espera                         |
|  | Drehwinkel                                     | torque angle                    | angle de serrage                  | ángulo de giro                           |

**Motortyp / Engine type / Type de moteur / Tipo de motor**

81,3 mm Ø, -/1,47 mm ÷

Fiesta, Escort, Orion, ab 02/1984&gt;

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/11/12

**\*580.075\***