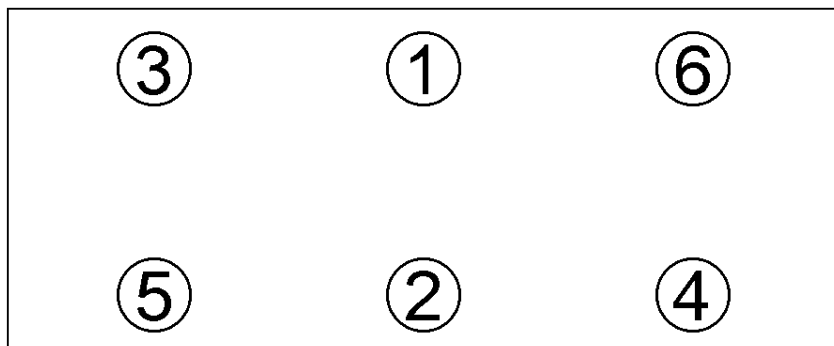
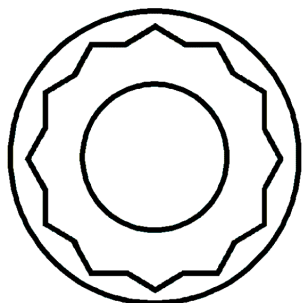


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****649.280**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornilloAnziehen/
Tightening/
Serrage/
Apriete

☼ -> MY 2009

29 Nm

69 Nm

➤ losen 180°

➤ losen 180°

49 Nm

➤ 80° - 90°

➤ 40° - 45°

➤ only bolt 1&2: 45°

☼ MY 2010 ->

Step 1-5:

40 Nm

95 Nm

➤ losen 180°

➤ losen 180°

10 Nm

☼ MY 2010 ->

Step 5-10:

30 Nm

70 Nm

➤ 80° - 90°

➤ 40° - 45°

➤ only bolt 1&2: 45°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 93,5 mm; ÷: 0,6 mm

Mot: EJ20X/Y; EJ204; EJ205

2.0 ltr. 16V Boxer

2006 >

Forester, Exiga, Legacy, Liberty, Impreza

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

649.280