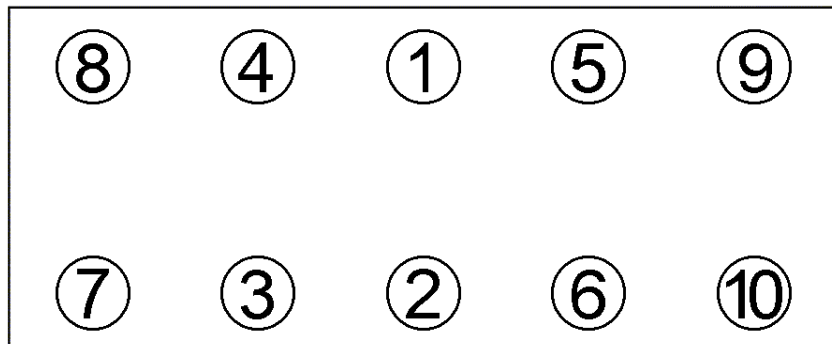


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****431.321**passend für / suitable for
adaptable à / adaptable a**Citroën / Peugeot****Das Original**Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

267.551
M 12x1,5x121Anziehen/
Tightening/
Serrage/
AprieteCitroën: Jumper
● 22 Nm
● 60 Nm
□ 360°
60 Nm
➤ 220°Peugeot: Boxer
● 22 Nm
● 60 Nm
□ 360°
60 Nm
➤ 110°
➤ 110°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 86 mm, ÷ 1,25 mm, 1 Loch

Mot: 4HY, DW12UTED
2,2 Ltr. HDi
74 kW (101 PS)

Boxer, Jumper

ab 2002>

Elring-ServiceteamFon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/11/12

431.321